 


UPRIGHT FREEZER

Instruction Manual

SKU:RF-L-AZ-HM/MF-11-H-AZ-HM

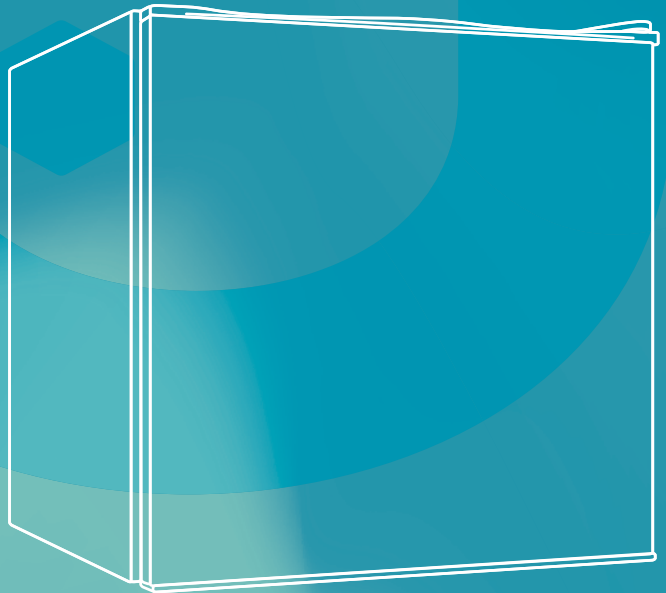

Congratulations

Dear Customer:

Welcome to the Euhomy family. Thank you for purchasing one of our products.

Our goal is to provide you with superior service. If there is anything missing from or wrong with your order, or if you have any questions about using our ice maker, PLEASE contact us.

Email: support@euhomy.com

Facebook: [@Euhomy.Official](https://www.facebook.com/Euhomy.Official)

The Euhomy team is available 24/7 to address your questions, comments, and concerns. Your satisfaction is our ultimate goal. We want to make everything right so you'll share your positive experience with other shoppers on Amazon.

If you experience any problems, please send an email to support@euhomy.com.

Our mission:

- * To be the most trusted appliance brand.
- * To create practical, compact appliances that better your life.

Be sure to register at
www.euhomy.com/register
for updates, warranty, and other relevant information.

Life tips

| QUESTION | ANSWER |
|---|---|
| Are the shelves inside the freezer movable? | The shelves in our 1.1 and 2.1 Cu. Ft freezers are movable, while the shelves in our 3.0 Cu. Ft freezer are fixed. The reason is that, because the inner space of the 3.0 Cu. Ft freezer is bigger, in order to achieve a good cooling effect, there is a cooling tube attached to each shelf. The shelves are designed immovable so as to prevent the cooling tube from being damaged. |
| What is the proper temperature? | The temperature range of our freezer is from -7 to -8-degrees F. Kindly note that the temperature will be a little higher when you measure the temperature with the door open. |
| I hear the compressor turns on and off. Is that normal? | It's normal for the compressor to turn on automatically when the temperature inside the freezer is higher than the settled temperature and turns off automatically when the temperature inside the freezer reaches the settled temperature. |
| Change the door opening direction | Hinge position for details, please refer to P7. Open the protective cover, twist out the screw, pull out the leakage hole of the protectivecap on the other side, and fix the hinge on it with screw. Both the top and bottom of the freezer need to replace the hinges. |
| Why doesn't the freezer have a back cover? All of the parts are exposed. | The freezer is designed not having a back cover. Because without the back cover, the heat can better dissipate so as to prolong its service life. No back cover will not affect the use of the freezer as long as it is used and operated properly. |
| Why is the freezer making a sound when it is plugged in? | Boiling water, gurgling sounds or slight vibrations are normal operating sounds. They are made while refrigerant is circulating through the cooling coils. The thermostat control will also click when it cycles on and off. |
| Why does the freezer have a smell of gasoline? | The freezer was cleaned by detergent before it was sent out from the factory and there is paint on the back of the freezer. We assume that it's been put in the box for too long. If the freezer works right, then there is no problem with it. You just need to put it in a ventilated place for some time and then the smell will disappear. |
| Why are the two sides of the freezer very hot? | Please do not place the freezer too close to the wall. It's better to leave a 4 inches gap between the freezer and the wall, so that the freezer can dissipate heat well. If the sides are really hot, please unplug it for 30 mins to 1 hour to give it a rest and then plug it in again. |
| Is it necessary to put a drip pan under the freezer? | We think it is not necessary to put a drip pan under the freezer because the temperature inside of the freezer is below 7.6 degree F, there will be no water dripping down. And our freezer will not produce liquid waste. |

Contents

| | |
|---------------------------------------|-------|
| Important safety instructions | 02 |
| Parts & Features | 03 |
| Installing your freezer | 04 |
| Installing your freezer CONT | 05 |
| Freezer feature and Use | 06 |
| Freezer feature and Use CONT | 07-08 |
| Proper freezer care and Cleaning | 09 |
| Proper freezer care and Cleaning CONT | 10 |
| Troubleshooting | 11 |
| Warranty | 12 |

Important safety instructions

WARNING

READ ALL THE INSTRUCTIONS BEFORE USING THIS APPLIANCE. WHEN USING THIS APPLIANCE, ALWAYS EXERCISE BASIC SAFETY PRECAUTIONS, INCLUDING THE FOLLOWING:

Note

If the refrigerator/freezer has been placed in a horizontal or tilted position for any period of time, please wait 24 hours before plugging the unit in.

- Use this appliance only for its intended purpose as described in this user manual.
- This freezer must be properly installed in accordance with the installation instructions before use. See grounding instructions in the installation section.
- Never unplug your freezer by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
- Immediately repair or replace all electric service cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length, the plug or the connector end.
- Unplug your freezer before cleaning or before making any repairs.
- Do not use any electrical device or any sharp instrument when defrosting your freezer.
- If your old freezer is not being used, we recommend that you remove the doors. This will reduce the possibility of danger to children.
WARNING: After your freezer is in operation, do not touch the cold surfaces in the freezer compartment, particularly when your hands are damp or wet. Skin may stick to these extremely cold surfaces.
- Do not refreeze foods that have been thawed completely. The United States Department of Agriculture in Home and Garden Bulletin No. 69 reads: "...You may safely refreeze frozen foods that have thawed if they still contain ice crystals or if they are still cold—below 40°F".
"...Thawed ground meats, poultry, or fish that have any off-odor or off-color should not be refrozen and should not be eaten. Thawed ice cream should be discarded. If the odor or color of any food is poor or questionable, discard it. The food may be dangerous to eat."
"...Even partial thawing and re-freezing reduce the eating quality of foods, particularly fruits, vegetables, and prepared foods. The quality of red meats is affected less than that of many other foods. Use refrozen foods as soon as possible, to save as much of its eating quality as you can.
- This freezer should not be recessed or built-in an enclosed cabinet. It is designed for freestanding installation only.
- Do not operate your freezer in the presence of explosive fumes.

SAVE THESE INSTRUCTIONS


HOUSEHOLD USE ONLY

Dispose of property in accordance with Federal or Local Regulations. Flammable refrigerant used.

DANGER

Risk of child entrapment. Before you throw away your old refrigerator or freezer, remove the doors. Leave the shelves in place so that children may not easily climb inside.

| Parts & Features

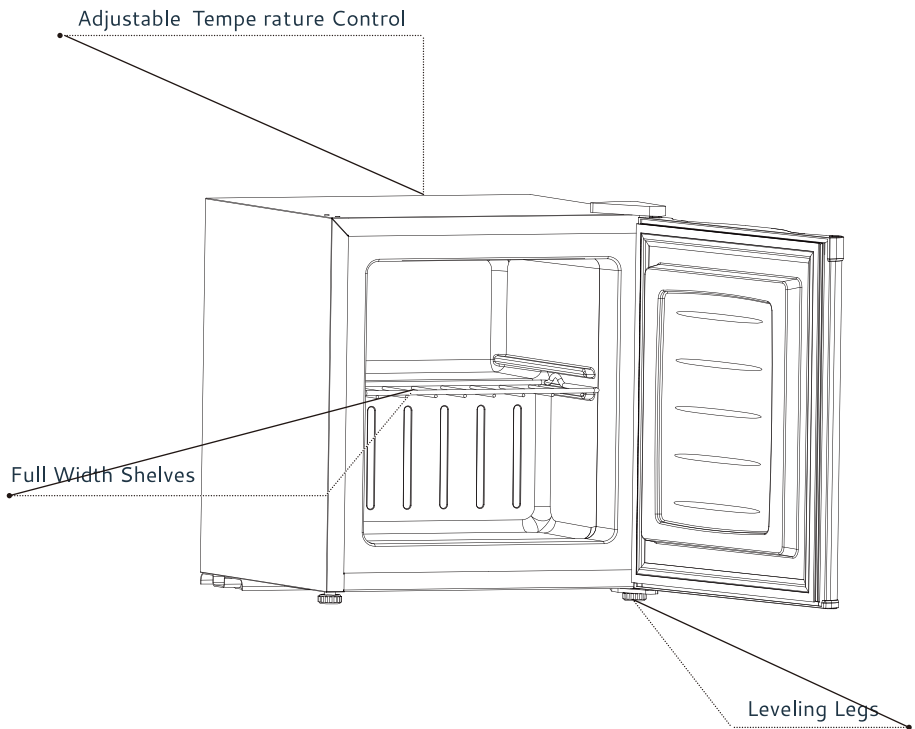 

Installing your freezer

UNPACKING YOUR FREEZER

1. Remove all packaging material. This includes the foam base and all adhesive tape holding the freezer accessories inside and outside.
2. Inspect and remove any remains of packing, tape or printed materials before switching on the freezer.

ADJUSTING YOUR FREEZER

- Your freezer is designed for freestanding installation only. It should not be recessed or built-in.
- Place the freezer on a surface strong enough to support it when fully loaded.
- When moving the freezer, never tilt it more than a 45-degree angle. This could damage the compressor and the sealed system.
- If the freezer is tilted, let it stand in an upright position for at least 24 hours prior to plugging in. This is to allow the refrigerant to settle.

PROPER AIR CIRCULATION

- To assure that your freezer works at the maximum efficiency it was designed for, you should install it in a place with proper air circulation, plumbing and electrical connections.
- The following are recommended clearances around the freezer:
 - Sides: 4" (102mm)
 - Back: 4" (102mm)
 - Top: 4" (102mm)

I Installing your freezer CONT

WARNING

ELECTRICAL REQUIREMENT – SHOCK HAZARD

ELECTRICAL REQUIREMENT

- Make sure there is a suitable power outlet (115 volts, 15 amps outlet) with proper grounding to power the freezer.
- Avoid the use of three plug adapters or cutting off the third grounding in order to accommodate a two-plug outlet. This is a dangerous practice since it provides no effective grounding for the freezer and may be a shock hazard.

USE OF EXTENSION CORD

- Avoid the use of an extension cord because of the risk of potential safety hazards under certain conditions. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug and a 3-slot outlet that will accept the plug. The marked rating of the extension cord must be equal to or greater than the electrical rating of the appliance. **DO NOT USE EXTENSION CORD LONGER THAN 12 FT.**

INSTALL LIMITATIONS

- Do not install your freezer in any location that is not properly insulated or heated like in a garage or similar. Your freezer was not designed to operate in temperature settings below 55° Fahrenheit.
- Select a suitable location for the freezer where it can stand on a hard even surface away from direct sunlight or heat source e.g. radiators, baseboard heaters, cooking appliances etc. Any floor unevenness should be corrected.

Freezer feature and Use

OPERATING YOUR FREEZER

- Once the freezer is in its proper place, plug it in an electrical outlet having 115 volts and 15 amps.
- Set the temperature on the temperature control knob "1" being the warmest and "7" being the coldest. Initially set the temperature on "4". Place food inside the freezer. After using the freezer for 24 hours, you can set the freezer to your desired setting.
- In case you unplug your freezer or experience an electrical outage, allow 5 minutes before plugging it back in.

 
GENERAL FEATURES

Adjustable temperature dial:

Your freezer will automatically maintain the temperature level you select. The temperature control dial has 7 settings plus OFF "1" being the warmest and "7" being the coldest. Turning the dial to OFF stops cooling the freezer. Set the dial to "4" and allow 24 hours to pass before adjusting the temperature to your needs.

WARNING

If the freezer has been placed in a horizontal or tilted position for any period of time, please wait 24 hours before plugging the unit in.

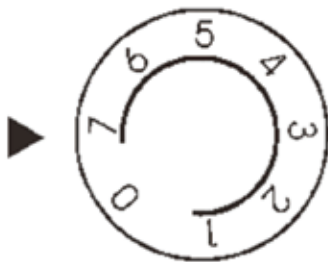

Control Panel
Varies by Model

NORMAL OPERATING SOUNDS YOU MAY HEAR

- Boiling water, gurgling sounds or slight vibrations that are the result of the refrigerant circulating through the cooling coils.
- The thermostat control will click when it cycles on and off.

Freezer feature and Use CONT

DEFROSTING

- For the most efficient operation and minimum energy consumption, defrost whenever the frost becomes 1/4" thick. Never use a sharp or metallic instrument to remove the frost, as it may damage the cooling coils. (A punctured coil will void the warranty). Use only a plastic scraper. Do not use boiling water as it may damage the unit.
- Remove frozen food from the freezer and place it in a cooler to prevent it from spoiling.
- Turn the temperature control to OFF position and unplug the unit. Defrosting usually takes a few hours. To defrost faster keep the freezer door open.

DEFROST DRAIN

Place a narrow defrost pan (not included) in front of the freezer, and then use the plastic scraper to gently drain the water that has accumulated at the bottom of the freezer during defrosting into the pan.

NOTE

Monitor the defrost pan to avoid overflow.

 
- When defrosting is complete, wipe the interior of the freezer with a soft cloth. Plug the power cord back into the electrical outlet.
- Reset the temperature control to the desired setting.
- Return the food into the freezer.

DEFROSTING

- Your freezer has two levelling legs which are located in the front bottom corners of your freezer. After properly placing your freezer in its final position, you can level your freezer.
- The levelling legs can be adjusted by turning them counter clockwise to raise your freezer or by turning them clockwise to lower your freezer. The freezer door will close easier when levelling legs are extended.

LEVELING YOUR FREEZER

- 1.Remove the top hinge cover using a flat head screw driver. Gently lift from the rear of the hinge and slide forward.
- 2.Loosen the top hinge screws using a Phillips head screwdriver.
- 3.Adjust the door or put a spacer in between and then tighten the screws.
- 4.Replace the top hinge cover by aligning the rear of the cover with the rear of the hinge. Press firmly on the front of the cover until it snaps in place.

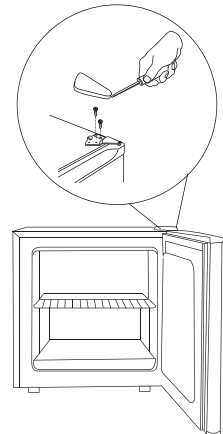

| Freezer feature and Use CONT

FOOD STORAGE INFORMATION

FROZEN FOOD:

- Wipe containers before storing to avoid unnecessary spills.
- Hot food should be allowed to cool before storing in the freezer. This will prevent unnecessary energy use.
- When storing meats, keep in the original packaging or rewrap as necessary.
- Proper freezer storage requires correct packaging. All foods must be packaged in such a way as to not allow the flow of air or moisture in or out. Improper storage will result in odor and taste transfer, which will result in the drying out of the improperly packaged food.
- Follow package or container instructions for proper storage.
- Packaging Recommendations:
 - Plastic containers with air tight lids
 - Heavy duty aluminium foil
 - Plastic wrap made from saran film
 - Self-sealing plastic bags
- Do not refreeze defrosted/thawed foods.
- It is recommended that the freezing date be marked on the packaging.

These are some suggestions for safe storage:

| | |
|------------------------------------|--------------|
| • TV Dinners | 3 - 4Months |
| • Fresh shrimp, scallops, crawfish | 3 - 6Months |
| • Hamburger & stew meats | 3 - 4Months |
| • Ground turkey, veal, pork | 3 - 4Months |
| • Chops | 4 - 6Months |
| • Steaks | 6 - 12Months |
| • Chicken or turkey, whole | 1 year |

I Proper freezer care and Cleaning

CLEANING AND MAINTENANCE

WARNING

To avoid electric shock, always unplug your freezer before cleaning. Ignoring this warning may result in death or injury.

CAUTION

Before using cleaning products, always read and follow the manufacturer's instructions and warnings to avoid personal injury or product damage.

GENERAL:

- Prepare a cleaning solution by mixing 3-4 tablespoons of baking soda with warm water. Use a sponge or soft cloth, dampened with the cleaning solution, to wipe down your freezer. Rinse with clean warm water and dry with a soft cloth.
- Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. SOME of these chemicals may dissolve, damage and/or discolor your freezer.

DOOR GASKETS:

- Clean door gaskets every three months according to general instructions. Gaskets must be kept clean and pliable to assure a proper seal.
- Petroleum jelly applied lightly on the hinge side of gaskets will keep the gasket pliable and assure a good seal.

I Proper freezer care and Cleaning CONT

POWER INTERRUPTIONS

- Occasionally there may be power interruptions due to thunderstorms or other causes. Remove the power cord from the AC outlet when a power outage occurs. When the power has been restored, re-plug power cord to the AC outlet.

VACATION AND MOVING CARE

- For long vacations or absences, empty food from freezer, move the temperature DIAL to the OFF position and clean the door gaskets according to “General cleaning” section. Prop the doors open so that air can circulate inside. When moving, always move the freezer vertically. Do not transport the unit lying down. Possible damage to the sealed system may occur.

WARNING

If there is an outage for a prolonged period, inspect and discard spoiled or thawed food in freezer. Clean freezer before reusing.

I Troubleshooting

You may try to solve the following simple problems by yourself. If they cannot be solved, please contact the after-sales department.

| | |
|---|--|
| <p>FREEZER DOES NOT OPERATE:</p> | <ul style="list-style-type: none"> • Check if thermostat control is not in the "OFF" position. • Check if freezer is plugged in. • Check if there is power at the AC outlet by checking the circuit breaker. • Wait for 30–40 minutes to see whether freezer will start. • Compressor cycle must be complete to operate. |
| <p>FOOD TEMPERATURE APPEARS TOO WARM:</p> | <ul style="list-style-type: none"> • Frequent door openings. • Allow time for recently added warm food to reach freezer temperature. • Check gaskets for proper seal. • Clean condenser coils (for models with exposed condenser coils). • Adjust temperature control to colder setting. |
| <p>FOOD TEMPERATURE IS TOO COLD:</p> | <ul style="list-style-type: none"> • If temperature control setting is too cold, adjust to a warmer setting and allow several hours for temperature to adjust. |
| <p>COMPRESSOR RUNS TOO FREQUENTLY:</p> | <ul style="list-style-type: none"> • This may be normal to maintain constant temperature during high temperature and humid days. • Doors may have been opened frequently or for an extended period of time. • Check gasket for proper seal. • Check to see if the door is completely closed. • Check freezer compartment for blockage from frozen food packages, containers, etc. |
| <p>FREEZER HAS AN ODOR:</p> | <ul style="list-style-type: none"> • Interior needs cleaning. • Foods improperly wrapped or sealed are giving off odors. |



DANGER – Risk Of Fire Or Explosion. Flammable Refrigerant Used. To Be Repaired Only By Trained Service Personnel. Do Not Puncture Refrigerant Tubing

CAUTION – Risk Of Fire Or Explosion, Flammable Refrigerant Used. Consult Repair Manual/Owner's Guide Before Attempting To Service This Product, All Safety Precautions Must be Followed

CAUTION – Risk Of Fire Or Explosion. Dispose Of Property In Accordance With Federal Or Local Regulations. Flammable Refrigerant Used

CAUTION – Risk Of Fire Or Explosion Due To Puncture Of Refrigerant Tubing; Follow Handling Instructions Carefully. Flammable Refrigerant Used

Warranty

Euhomy offers a limited 1-year warranty ("warranty period") on all of our products purchased new and unused from Euhomy company, with an original proof of purchase and where a defect has arisen, wholly or substantially, as a result of faulty manufacture, parts or workmanship during the warranty period. The warranty does not apply where damage is caused by other factors, including without limitation:

- (a) normal wear and tear;
- (b) abuse, mishandling, accident, or failure to follow operating instructions;
- (c) exposure to liquid or infiltration of foreign particles;
- (d) servicing or modifications of the product other than by Euhomy;
- (e) commercial or non-household use.

The Euhomy warranty covers all costs related to restoring the proven defective product through repair or replacement of any defective part and necessary labor so that it conforms to its original specifications. A replacement product may be provided instead of repairing a defective product. Euhomy's exclusive obligation under this warranty is limited to such repair or replacement. A receipt indicating the purchase date is required for any claim, so please keep all receipts in a safe place. Although greatly appreciated, the product registration is not required to activate any warranty and product registration does not eliminate the need for the original proof of purchase. The warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by Euhomy, are used.

You may also arrange for service after the warranty expires at an additional cost. These are our general terms for warranty service, but we always urge our customers to reach out to us with any issue, regardless of warranty terms. If you have an issue with a Euhomy product, please contact us (support@euhomy.com), and we will do our best to resolve it for you.

EÜHOMY

Live the *cool life*



Email: support@euhomy.com



Facebook: [@Euhomy.Official](https://www.facebook.com/Euhomy.Official)